


# Schneelasterhöhung auf 2,50kN/m<sup>2</sup>

Augmentation de fret de neige - Abris-garages a toit plat

Wendland

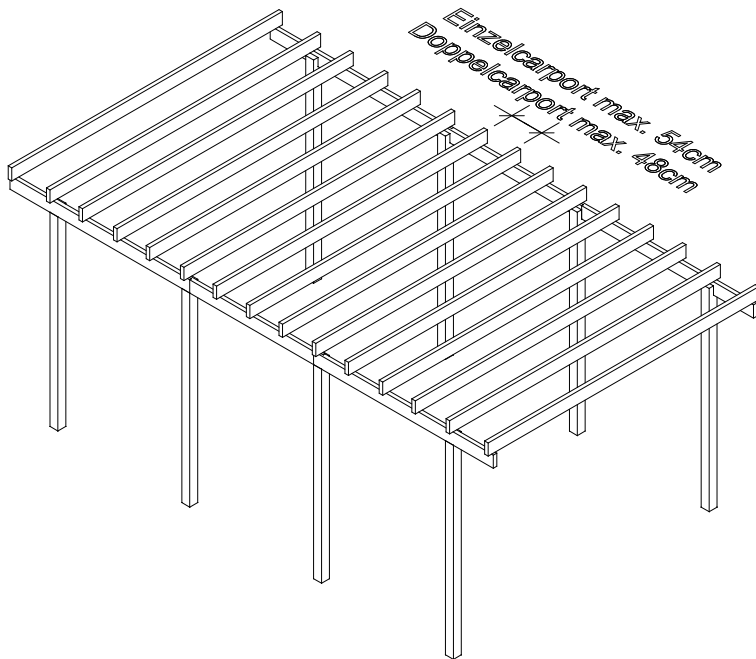

**Beachten Sie bei der Montage die Aufbauanleitung des Carports !**

Veuillez considérer avec l'assemblage le guide de construction du abris garages !

	<b>362x628cm</b> 39920 8 auf 2,00kN/m <sup>2</sup>	<b>362x870cm</b> 39921 5 auf 2,00kN/m <sup>2</sup>	<b>409x628cm</b> 39922 2 auf 2,50kN/m <sup>2</sup>	<b>409x870cm</b> 39923 9 auf 2,50kN/m <sup>2</sup>
LH6/12-321	4	6	-	-
LH6/16-371	-	-	4	6
C105-212	24	36	24	36
C105-132	8	12	8	12
LH6/16-26-201	8	12	8	12

	<b>630x637cm</b> 39924 6 auf 2,00kN/m <sup>2</sup>	<b>630x879cm</b> 39925 3 auf 2,00kN/m <sup>2</sup>
LH8/22-580	4	6
C105-212	8	12
C105-252	24	36
LH8/22-26-201	8	12